


TYPE 1 & 2

Please refer to the service note at the end of the IPL before ordering parts.

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

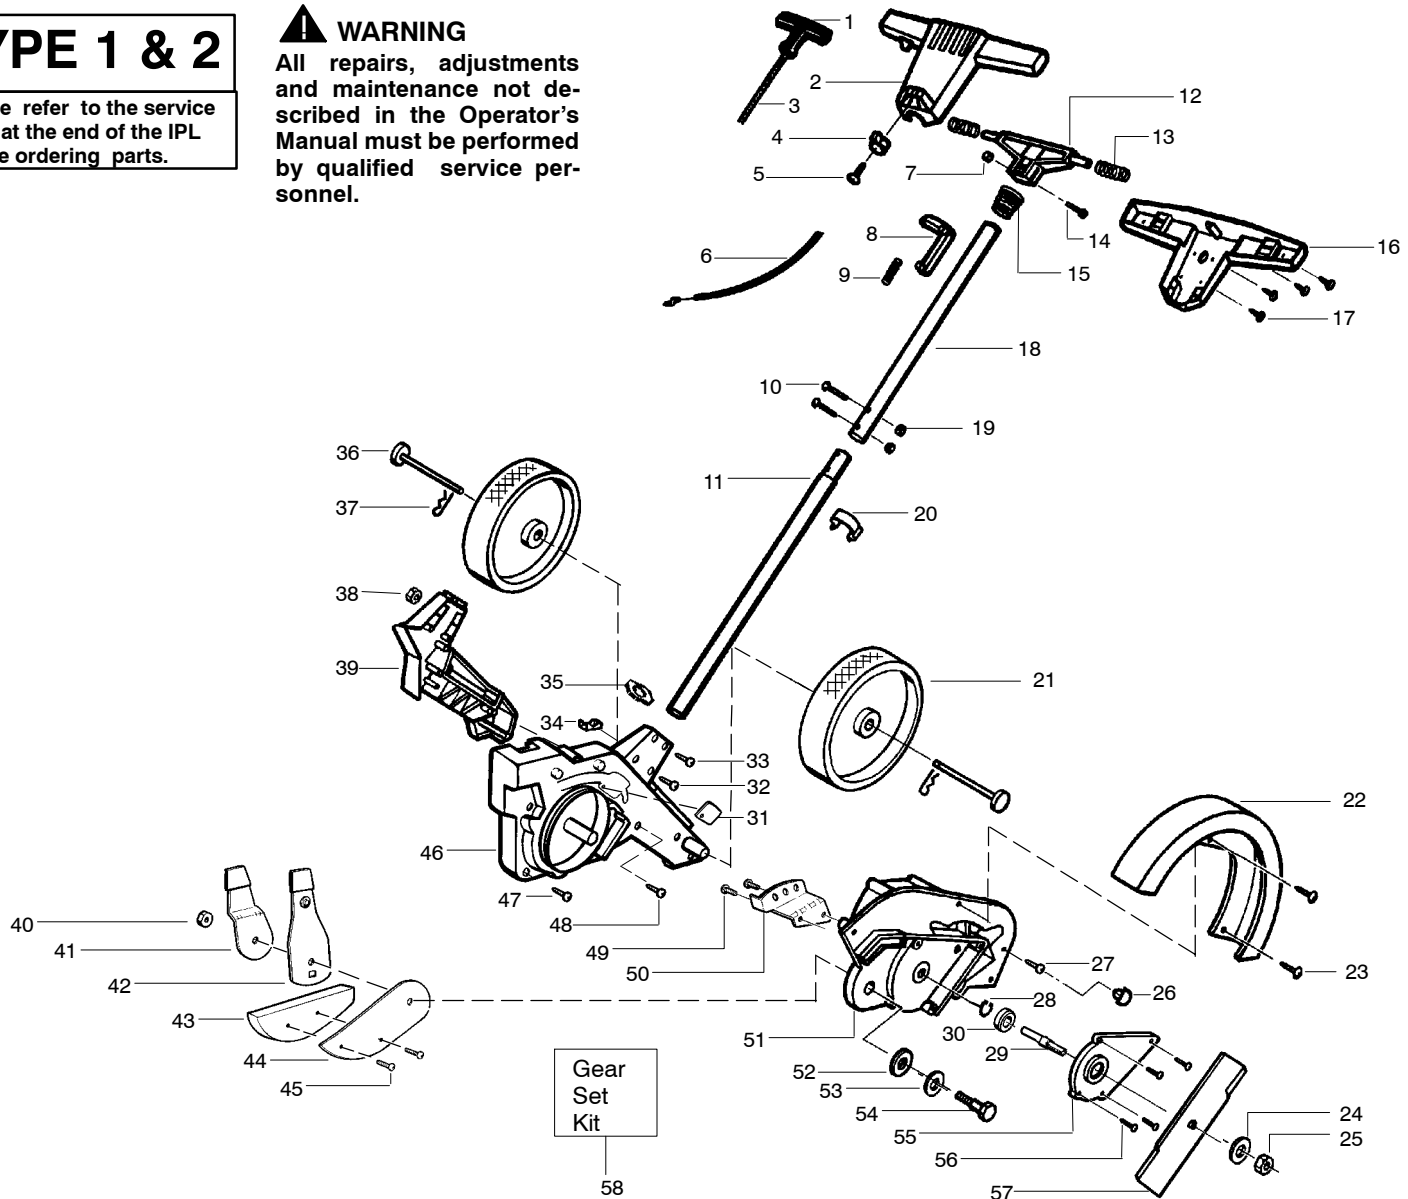


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530027569	Handle-Starter	22.	530095629	Shield-Front Blade	43.	530054071	Foot-Skid
2.	530036677	Handle-Upper	23.	530015843	Screw	44.	530053501	Arm-Swing
3.	530069421	Kit-Rope	24.	530016281	Washer-Belleville	45.	530015814	Screw
4.	530036985	Eyelet-Handle	25.	530016032	Nut	46.	530038299	Housing-Fan
5.	530015241	Screw	26.	530036935	Plug-Dust	47.	530016386	Screw
6.	530036674	Assy-Throttle Cable	27.	530015770	Screw	48.	530015940	Screw
7.	530015768	Locknut	28.	530037625	Retainer Ring-Flat	49.	530015814	Screw
8.	530036673	Trigger-Throttle	29.	530095070	Shaft-Output	50.	530053544	Plate-Back
9.	530036982	Spring-Throttle	30.	530016042	Washer-Thrust	51.	530053626	Assy-Gear Box
10.	530015999	Bolt-Shoulder Tube	31.	530038308	Retainer-Fuel Line	52.	530016040	Washer-Bolt Adjust
11.	530095103	Tube-Lower Handle	32.	530015886	Screw	53.	530016280	Washer-Wave
12.	530036983	Coupling-Handle	33.	530015774	Screw	54.	530016275	Bolt-Shoulder
13.	530036981	Spring-Isolator	34.	530015922	Nut-Speed	55.	530036934	Assy-Bearing Holder
14.	530015774	Screw	35.	530019199	Gasket-Tube	56.	530015814	Screw
15.	530036984	Spring-Handle	36.	530015997	Pin-Axle	57.	530095086	Blade
16.	530036676	Handle-Lower	37.	530016002	Bridge-Pin	58.	530071258	Kit-Gear Set
17.	503210719	Screw	38.	530015768	Locknut			Not Shown
18.	530095104	Tube-Upper Handle	39.	530038301	Cover-Axle			
19.	530015768	Locknut	40.	530016063	Nut-Swing Arm		530088959	Manual (type 1)
20.	530015982	Clamp-Cable	41.	n/a	Lever-Limiter		530163408	Manual (type 2)
21.	530095663	Wheel-Rear	42.	530053792	Assy-Lever Adjustment		530031159	Wrench-Hex 5/32

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 3

⚠ WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

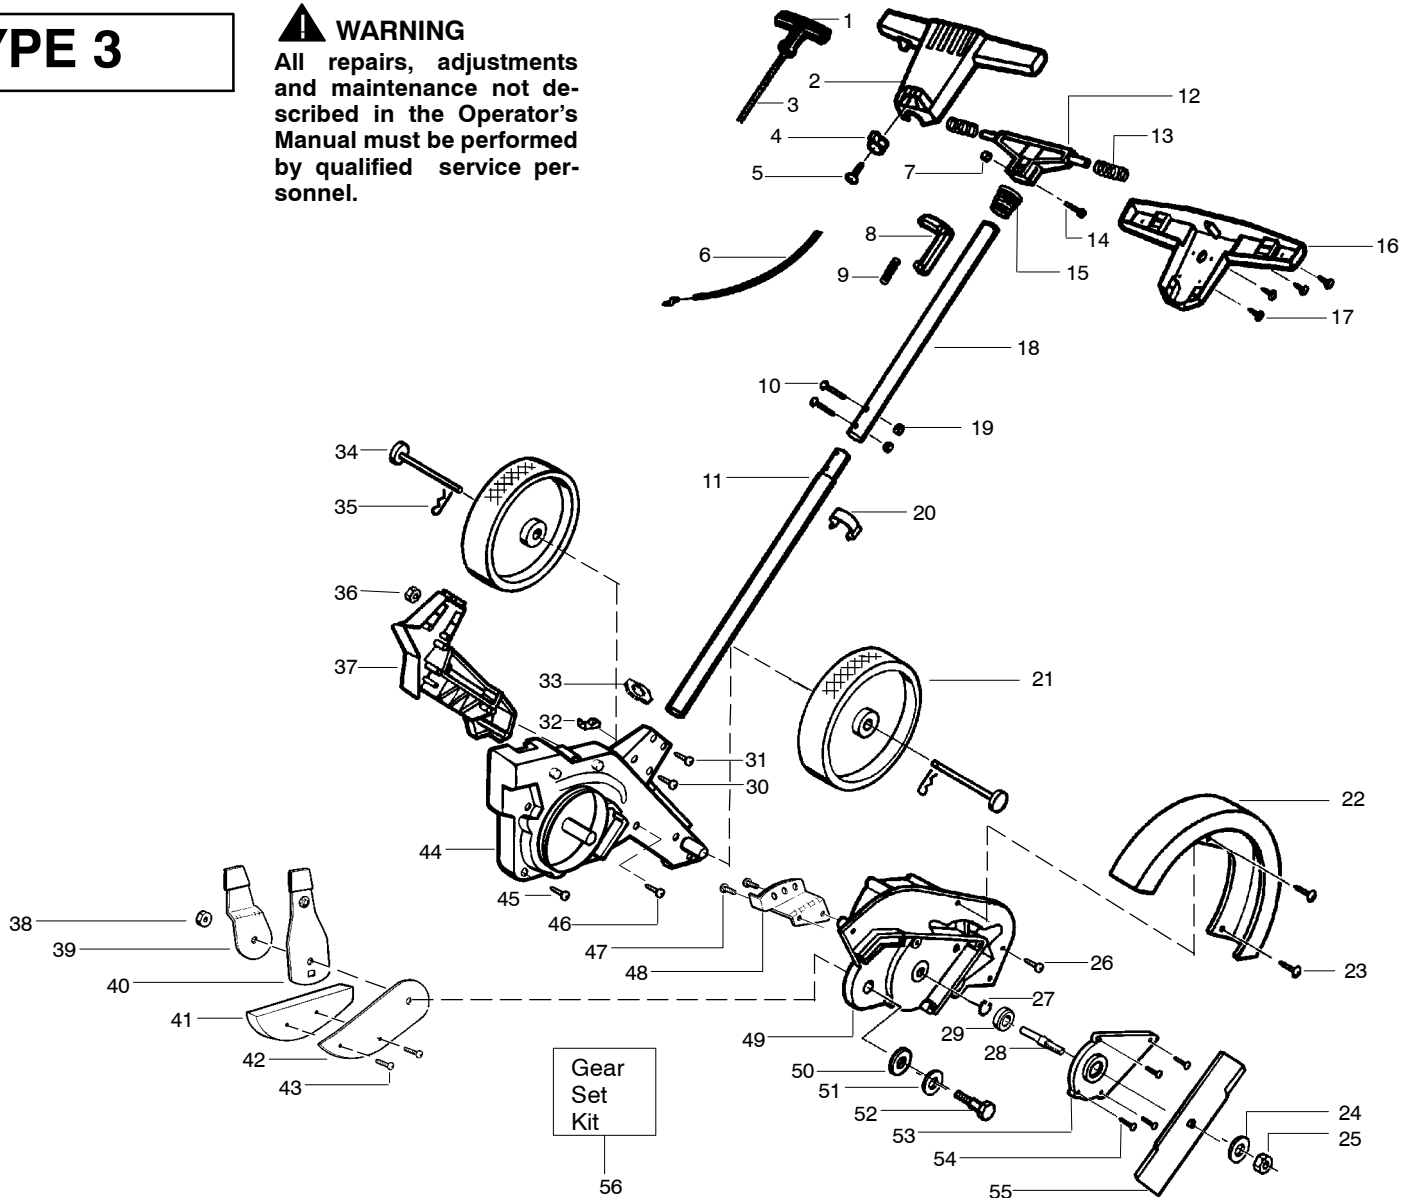


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530027569	Handle-Starter	22.	530095629	Shield-Front Blade	41.	530054071	Foot-Skid
2.	530036677	Handle-Upper	23.	530015843	Screw	42.	530053501	Arm-Swing
3.	530069421	Kit-Rope	24.	530016281	Washer-Belleville	43.	530015814	Screw
4.	530036985	Eyelet-Handle	25.	530016032	Nut	44.	530057597	Housing-Fan
5.	530015241	Screw	26.	530015770	Screw	45.	530016386	Screw
6.	530036674	Assy-Throttle Cable	27.	530037625	Retainer Ring-Flat	46.	530015940	Screw
7.	530015768	Locknut	28.	530095070	Shaft-Output	47.	530015814	Screw
8.	530036673	Trigger-Throttle	29.	530016042	Washer-Thrust	48.	530053544	Plate-Back
9.	530036982	Spring-Throttle	30.	530015886	Screw	49.	530053626	Assy-Gear Box
10.	530015999	Bolt-Shoulder Tube	31.	530015774	Screw	50.	530016040	Washer-Bolt Adjust
11.	530095103	Tube-Lower Handle	32.	530015922	Nut-Speed	51.	530016280	Washer-Wave
12.	530036983	Coupling-Handle	33.	530019199	Gasket-Tube	52.	530016275	Bolt-Shoulder
13.	530036981	Spring-Isolator	34.	530015997	Pin-Axle	53.	530037367	Assy-Bearing Holder
14.	530015774	Screw	35.	530016002	Bridge-Pin	54.	530015814	Screw
15.	530036984	Spring-Handle	36.	530015768	Locknut	55.	530095086	Blade
16.	530036676	Handle-Lower	37.	530057602	Cover-Axle	56.	530071258	Kit-Gear Set
17.	530016273	Screw	38.	530016063	Nut-Swing Arm	Not Shown		
18.	530095104	Tube-Upper Handle	39.	n/a	Lever-Limiter	530088959		Manual (type 1)
19.	530015768	Locknut	40.	530053792	Assy-Lever Adjustment	530163408		Manual (type 2 & 3)
20.	530015982	Clamp-Cable				530031111		Wrench-Hex 5/32
21.	530095663	Wheel-Rear						

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
 ● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 4,5

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

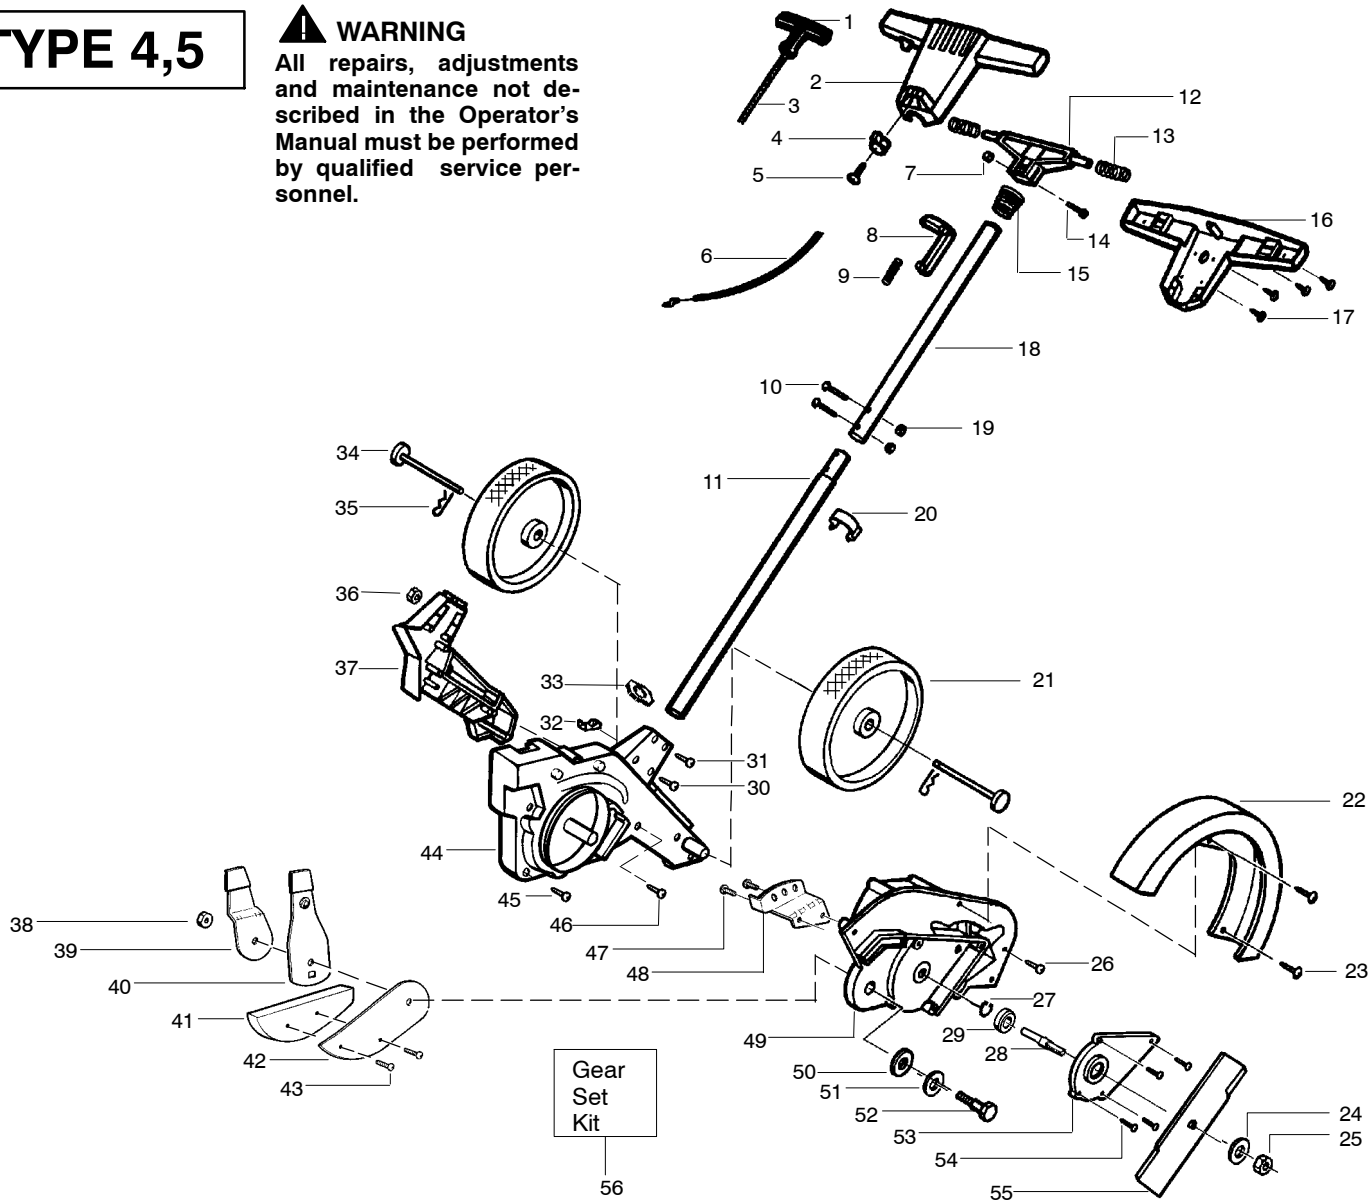


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530027569	Handle-Starter	22.	530095629	Shield-Front Blade	41.	530054071	Foot-Skid
2.	530036677	Handle-Upper	23.	530015843	Screw	42.	530053501	Arm-Swing
3.	530069421	Kit-Rope	24.	530016281	Washer-Belleville	43.	530015814	Screw
4.	530036985	Eyelet-Handle	25.	530016032	Nut	44.	530071989	Kit-Axle Cover/Fan Hsg
5.	530015241	Screw	26.	530016406	Screw	45.	530016386	Screw
6.	530036674	Assy-Throttle Cable	27.	530037625	Retainer Ring-Flat	46.	530015940	Screw
7.	530015768	Locknut	28.	530095070	Shaft-Output	47.	530015814	Screw
8.	530036673	Trigger-Throttle	29.	530016042	Washer-Thrust	48.	530053544	Plate-Back
9.	530036982	Spring-Throttle	30.	530015886	Screw	49.	530053626	Assy-Gear Box
10.	530015999	Bolt-Shoulder Tube	31.	530015774	Screw	50.	530016040	Washer-Bolt Adjust
11.	530095103	Tube-Lower Handle	32.	530015922	Nut-Speed	51.	530016280	Washer-Wave
12.	530036983	Coupling-Handle	33.	530019199	Gasket-Tube	52.	530016275	Bolt-Shoulder
13.	530036981	Spring-Isolator	34.	530015997	Pin-Axle	53.	530037367	Assy-Bearing Holder
14.	530015774	Screw	35.	530016002	Bridge-Pin	54.	530015814	Screw
15.	530036984	Spring-Handle	36.	530015768	Locknut	55.	530095086	Blade
16.	530036676	Handle-Lower	37.	530071989	Kit-Axle Cover/Fan Hsg	56.	530071258	Kit-Gear Set
17.	530016273	Screw	38.	530016063	Nut-Swing Arm			Not Shown
18.	530095104	Tube-Upper Handle	39.	n/a	Lever-Limiter	530088959		Manual (type 1)
19.	530015768	Locknut	40.	530053792	Assy-Lever Adjustment	545186731		Manual (type 2,3,4)
20.	530015982	Clamp-Cable				530031111		Wrench-Hex 5/32
21.	530095663	Wheel-Rear						


✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 1

Please refer to the service note at the end of the IPL before ordering parts.

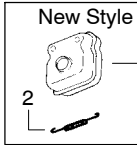

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

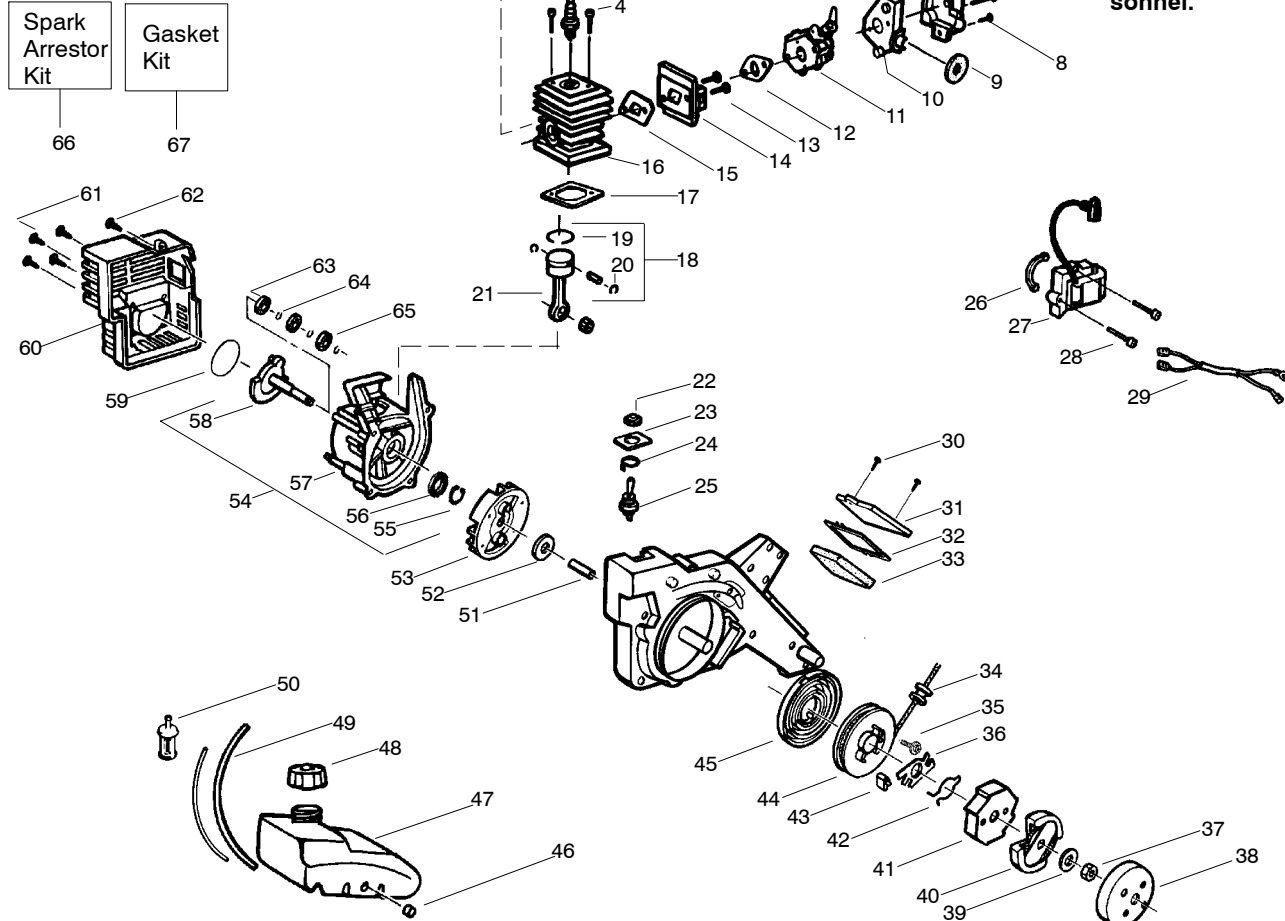


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	---	Kit-Muffler (incl.#3)	23.	530053921	Plate-Switch Indicator	48.	530014347	Assy-Fuel Cap
	530069989	Old Style	24.	530037066	Terminal-Grounding	49.	530069599	Kit-Fuel Line
	530071309	New Style	25.	530053920	Assy-Ground Switch (incl. 22-24)	50.	530014815	Assy-Fuel Pick-up
2.	---	Spring-Muffler	26.	530036145	Spacer-Module	51.	530036927	Spacer-Flywheel
	530016197	Old Style	27.	530039163	Module-Ignition	52.	530015828	Washer-Flat
	530042088	New Style	28.	530015954	Screw	53.	530039149	Assy-Flywheel
3.	530036622	Plug-Spark (RCJ-8Y)	29.	530014655	Assy-Switch Wire	54.	530014906	Assy-C/shaft & C/case (incl. 55-58, & 63-65)
4.	530015953	Screw	30.	530015983	Screw	55.	530015941	Retainer-C'shaft
5.	530069913	Gasket-Carb/Bracket(kit)	31.	530036631	Cover-Air Filter	56.	530019179	Seal-Crankcase
6.	530036622	Cover-Air Box	32.	530069913	Gasket-Cover (kit)	57.	530012414	Assy-C'case (incl.56,63-65)
7.	530015887	Screw	33.	530036664	Foam-Air Filter	58.	530052344	Assy-Crankshaft
8.	530015886	Screw	34.	530037224	Eyelet	59.	530069913	Kit-Spark Arrestor (incl.5,9,12,15,17,32,59)
9.	530069913	Seal-Foam (kit)	35.	530016080	Screw	60.	530036555	Shroud
10.	952030201	Base-Air Box	36.	530042073	Cam-Starter	61.	530015810	Screw
11.	530069654	Kit-Carb. (WT308)	37.	530626605	Nut	62.	530015934	Screw
12.	530069913	Gasket-Carb.(kit)	38.	530036665	Drum-Clutch	63.	530032125	Bearing-Inner
13.	530016014	Screw	39.	530015127	Washer-Flywheel	64.	530015945	Retainer-C'case
14.	530052236	Adapter-Carb.	40.	530014832	Assy-Clutch	65.	530032124	Bearing-Outer
15.	530069913	Gasket-Cyl./Carb. (kit)	41.	530036922	Cup-Starter	66.	---	Kit-Spark Arrestor (Old Style)
16.	530069757	Kit-Cylinder	42.	530042072	Wire-Starter Dog		530069380	New Style
17.	530069913	Gasket-Cyl. (kit)	43.	530027162	Dog-Starter		530071290	Kit Gasket
18.	530069987	Kit-Piston(incl.20,pin)	44.	530069418	Kit-Starter Pulley(incl.35)		530069913	
19.	530015162	Retainer-Pin	45.	530037229	Spring-Starter			
20.	530012472	Ring-Piston	46.	530053725	Isolator-Crankcase			
21.	530069615	Kit-Conn. Rod Assy.	47.	530047878	Assy-Fuel Tank			
22.	530016038	Boot-Switch w/nut						

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 2

Please refer to the service note at the end of the IPL before ordering parts.

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

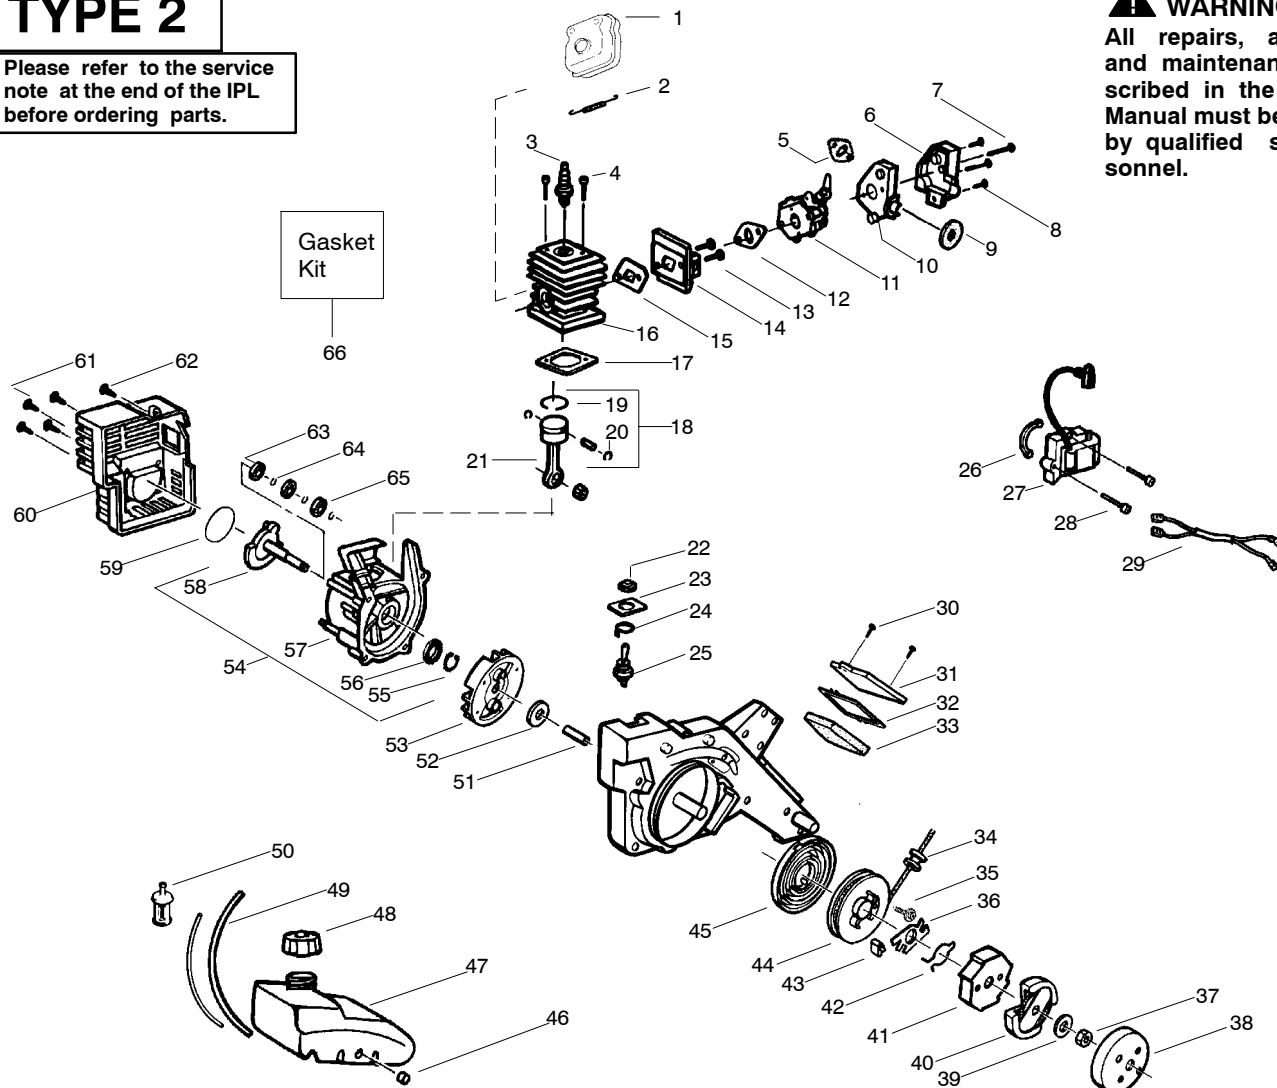


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530071396	Kit-Muffler (incl.#3)	24.	530037066	Terminal-Grounding	47.	530047878	Assy-Fuel Tank (incl. 48,49,50)
2.	530042088	Spring-Muffler	25.	530053920	Assy-Ground Switch (incl. 22-24)	48.	530014347	Assy-Fuel Cap
3.	952030249	Plug-Spark (RCJ-6Y)	26.	530036145	Spacer-Module	49.	530069599	Kit-Fuel Line
4.	530015953	Screw	27.	530039163	Module-Ignition	50.	530095646	Assy-Fuel Pick-up
5.	530071611	Gasket-Carb/Bracket(kit)	28.	530015954	Screw	51.	530036927	Spacer-Flywheel
6.	530036622	Cover-Air Box	29.	530014655	Assy-Switch Wire	52.	530015828	Washer-Flat
7.	530015887	Screw	30.	530015983	Screw	53.	530039149	Assy-Flywheel
8.	530015886	Screw	31.	530036631	Cover-Air Filter	54.	530014906	Assy-C/shaft & C/case (incl. 55-58, & 63-65)
9.	530071611	Seal-Foam (kit)	32.	530071611	Gasket-Cover (kit)	55.	530015941	Retainer-C'shaft
10.	530036626	Base-Air Box	33.	530036664	Foam-Air Filter	56.	530019179	Seal-Crankcase
11.	---	Kit-Carb.	34.	530037224	Eyelet	57.	530012414	Assy-C'case (incl.56,63-65)
	530069654	(WT-308)	35.	530016080	Screw	58.	530052344	Assy-Crankshaft
	530071634	(Wt-630)	36.	530042073	Cam-Starter	59.	530071363	O-ring-c'case/shrd (kit)
12.	530071611	Gasket-Carb.(kit)	37.	530626605	Nut	60.	530036555	Shroud
13.	530016014	Screw	38.	530036665	Drum-Clutch	61.	530015810	Screw
14.	530052236	Adapter-Carb.	39.	530015127	Washer-Flywheel	62.	530015934	Screw
15.	530071611	Gasket-Cyl./Carb. (kit)	40.	530014832	Assy-Clutch	63.	530032125	Bearing-Inner
16.	530071359	Kit-Cylinder	41.	530036922	Cup-Starter	64.	530015945	Retainer-C'case
17.	530071611	Gasket-Cyl. (kit)	42.	530042072	Wire-Starter Dog	65.	530032124	Bearing-Outer
18.	530071357	Kit-Piston(incl.19,20)	43.	530027162	Dog-Starter	66.	530071611	Kit Gasket (incl.5,9,12,15,17,32,59)
19.	530015162	Retainer-Pin	44.	530069418	Kit-Starter Pulley(incl.35)			
20.	530055120	Ring-Piston	45.	530037229	Spring-Starter			
21.	530069945	Kit-Conn. Rod Assy.	46.	530053725	Isolator-Crankcase			
22.	530016038	Boot-Switch w/nut						
23.	530053921	Plate-Switch Indicator						

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 3

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

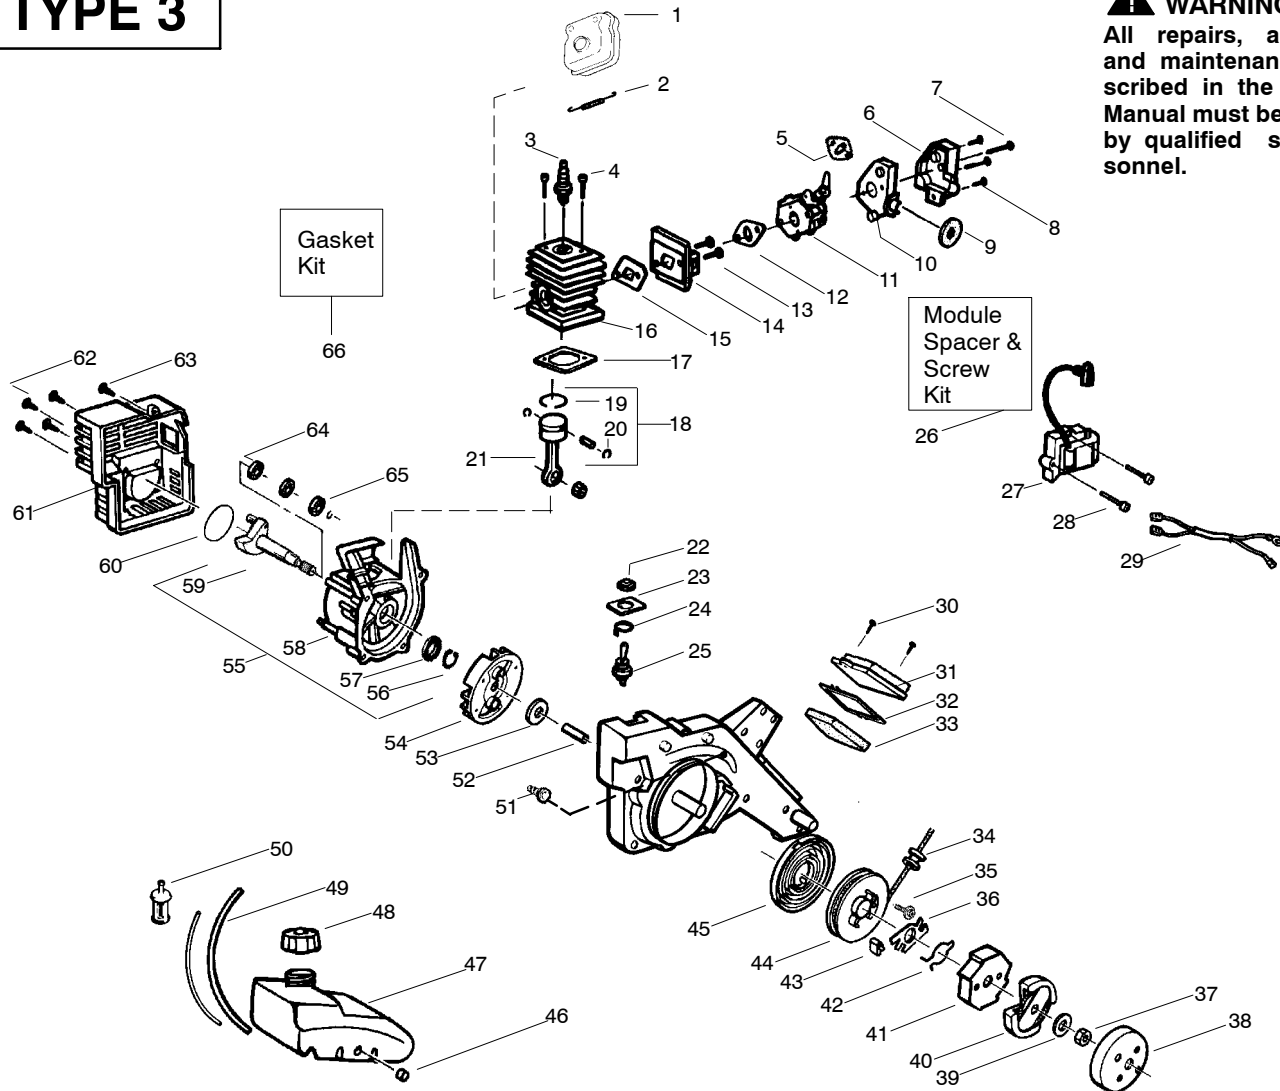


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530071396	Kit-Muffler (incl.#2)	24.	530037066	Terminal-Grounding	47.	530058782	Assy-Fuel Tank (incl. 48,49,50)
2.	530042088	Spring-Muffler	25.	530053920	Assy-Gound Switch (incl. 22-24)	48.	530014347	Assy-Fuel Cap
3.	952030249	Plug-Spark (RCJ-6Y)	26.	530071731	Kit-Mod. spacer/screw	49.	530069599	Kit-Fuel Line
4.	530015953	Screw	27.	530039163	Module-Ignition	50.	530095646	Assy-Fuel Pick-up
5.	530071611	Gasket-Carb/Bracket(kit)	28.	530016357	Screw	51.	530057308	Clip-Pine Tree
6.	530036622	Cover-Air Box	29.	530014655	Assy-Switch Wire	52.	530036927	Spacer-Flywheel
7.	530015887	Screw	30.	530015983	Screw	53.	530015828	Washer-Flat
8.	530015886	Screw	31.	530057612	Cover-Air Filter	54.	530054115	Assy-Flywheel
9.	530071611	Seal-Foam (kit)	32.	530071611	Gasket-Cover (kit)	55.	530071728	Assy-C/shaft & C/case (incl. 56,58,59)
10.	530036626	Base-Air Box	33.	530057034	Foam-Air Filter	56.	530015941	Retainer-C'shaft
11.	530071634	Kit-Carb. (Wt-630)	34.	530037224	Eyelet	57.	530071615	Kit-Crankcase Seal
12.	530071611	Gasket-Carb.(kit)	35.	530015882	Screw	58.	530071627	Assy-C'case (incl.56,64,65)
13.	530016014	Screw	36.	530042073	Cam-Starter	59.	530014864	Assy-Crankshaft
14.	530057618	Adapter-Carb.	37.	530626605	Nut	60.	530071363	O-ring-c'case/shrd (kit)
15.	530071611	Gasket-Cyl./Carb. (kit)	38.	530036665	Drum-Clutch	61.	530057607	Shroud
16.	530012482	Cylinder	39.	530015127	Washer-Flywheel	62.	530016386	Screw
17.	530071611	Gasket-Cyl. (kit)	40.	530014832	Assy-Clutch	63.	530016349	Screw
18.	530071476	Kit-Piston(incl.19,20)	41.	530036922	Cup-Starter	64.	530032125	Bearing-Inner
19.	530012472	Ring-Piston	42.	530042072	Wire-Starter Dog	65.	530055728	Bearing-Outer
20.	530015162	Cylinder	43.	530027162	Dog-Starter	66.	530071611	Kit Gasket (incl.5,9,12,15,17,32,60)
21.	530069945	Kit-Conn. Rod Assy.	44.	530069418	Kit-Starter Pulley(incl.35)			
22.	530016038	Boot-Switch w/nut	45.	530037229	Spring-Starter			
23.	530053921	Plate-Switch Indicator	46.	530053725	Isolator-Crankcase			

✓ = NEW PART NUMBER FOR THIS IPL ★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 4

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

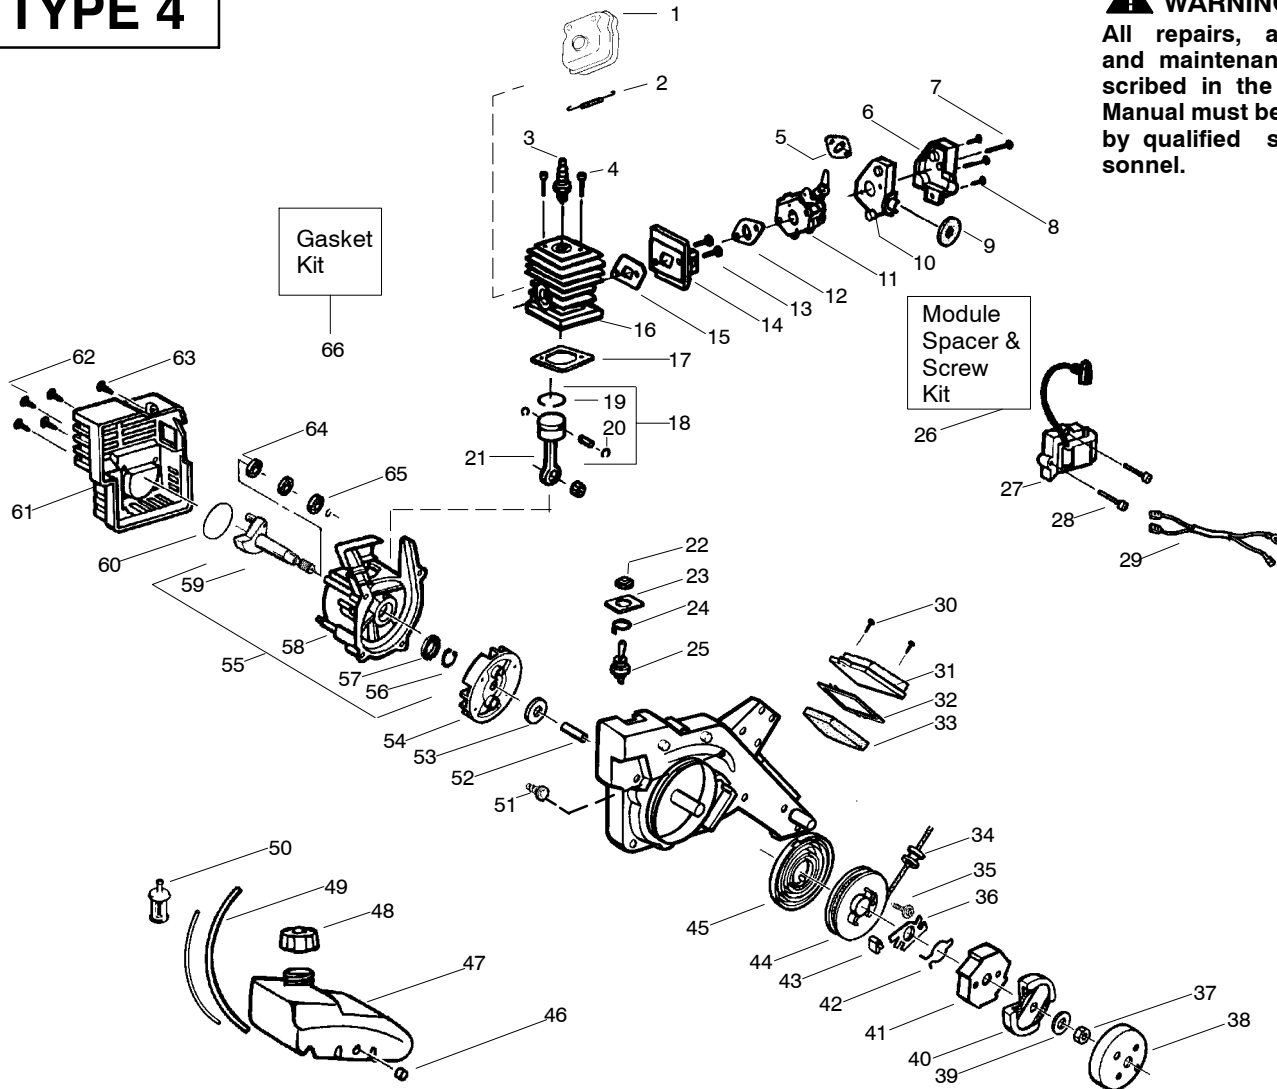


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530071396	Kit-Muffler (incl.#2)	24.	530037066	Terminal-Grounding	47.	530058782	Assy-Fuel Tank (incl. 48,49,50)
2.	530042088	Spring-Muffler	25.	530053920	Assy-Ground Switch (incl. 22-24)	48.	530014347	Assy-Fuel Cap
3.	952030249	Plug-Spark (RCJ-6Y)	26.	530071731	Kit-Mod. spacer/screw	49.	530069599	Kit-Fuel Line
4.	530015953	Screw	27.	530039163	Module-Ignition	50.	530095646	Assy-Fuel Pick-up
5.	530071611	Gasket-Carb/Bracket(kit)	28.	530016357	Screw	51.	530057308	Clip-Pine Tree
6.	530036622	Cover-Air Box	29.	530014655	Assy-Switch Wire	52.	530036927	Spacer-Flywheel
7.	530015887	Screw	30.	530015983	Screw	53.	530015828	Washer-Flat
8.	530015886	Screw	31.	530057612	Cover-Air Filter	54.	530057751	Assy-Flywheel
9.	530071611	Seal-Foam (kit)	32.	530071611	Gasket-Cover (kit)	55.	530071728	Assy-C/shaft & C/case (incl. 56,58,59)
10.	530036626	Base-Air Box	33.	530057034	Foam-Air Filter	56.	530015941	Retainer-C'shaft
11.	530071634	Kit-Carb. (Wt-630)	34.	530037224	Eyelet	57.	530019264	Screw
12.	530071611	Gasket-Carb.(kit)	35.	530015882	Screw	58.	530012509	Assy-C'case (incl.57,64,65)
13.	530016014	Screw	36.	530042073	Cam-Starter	59.	530014864	Assy-Crankshaft
14.	530057618	Adapter-Carb.	37.	530626605	Nut	60.	530071611	O-ring-c'case/shrd (kit)
15.	530071611	Gasket-Cyl./Carb. (kit)	38.	530036665	Drum-Clutch	61.	530057607	Shroud
16.	530012482	Cylinder	39.	530015127	Washer-Flywheel	62.	530016386	Screw
17.	530071611	Gasket-Cyl. (kit)	40.	530014832	Assy-Clutch	63.	530016349	Screw
18.	530071476	Kit-Piston(incl.19,20)	41.	530036922	Cup-Starter	64.	530032125	Bearing-Inner
19.	530012472	Ring-Piston	42.	530042072	Wire-Starter Dog	65.	530055728	Bearing-Outer
20.	530015162	Retainer-Pin	43.	530027162	Dog-Starter	66.	530071611	Kit Gasket (incl.5,9,12,15,17,32,60)
21.	530069945	Kit-Conn. Rod Assy.	44.	530069418	Kit-Starter Pulley(incl.35)			
22.	530016038	Boot-Switch w/nut	45.	530037229	Spring-Starter			
23.	530053921	Plate-Switch Indicator	46.	530053725	Isolator-Crankcase			

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 5

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

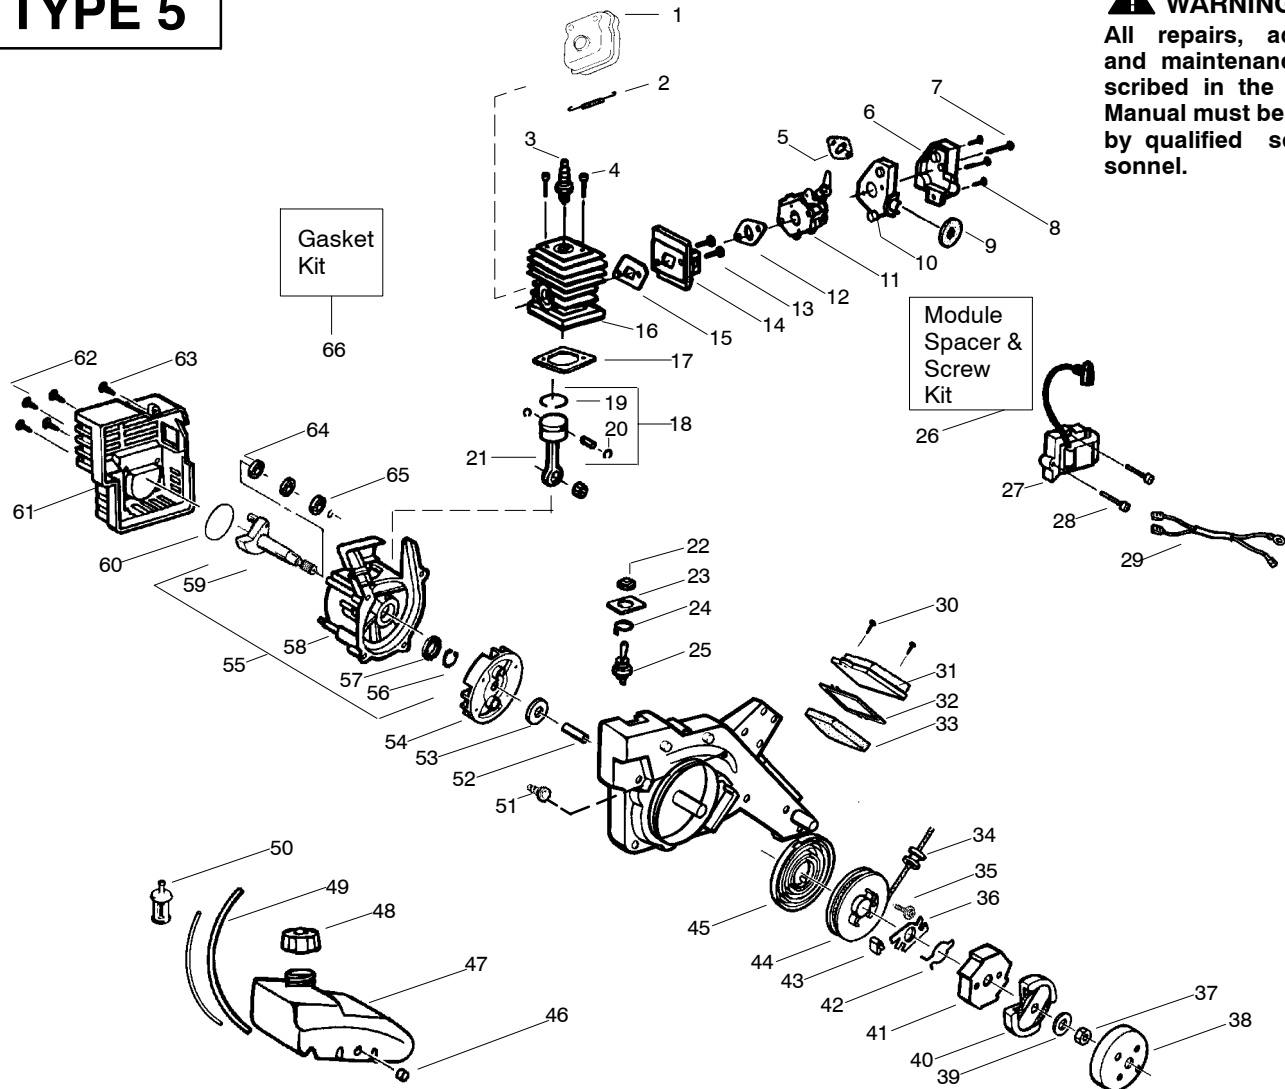


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530071396	Kit-Muffler (incl.#2)	24.	530037066	Terminal-Grounding	47.	530058782	Assy-Fuel Tank (incl. 48,49,50)
2.	530042088	Spring-Muffler	25.	530053920	Assy-Ground Switch (incl. 22-24)	48.	530014347	Assy-Fuel Cap
3.	952030249	Plug-Spark (RCJ-6Y)	26.	530071731	Kit-Mod. spacer/screw	49.	530069599	Kit-Fuel Line
4.	530015953	Screw	27.	530039163	Module-Ignition	50.	530095646	Assy-Fuel Pick-up
5.	530071611	Gasket-Carb/Bracket(kit)	28.	530016357	Screw	51.	530057308	Clip-Pine Tree
6.	530036622	Cover-Air Box	29.	530014655	Assy-Switch Wire	52.	530036927	Spacer-Flywheel
7.	530015887	Screw	30.	530015983	Screw	53.	530015828	Washer-Flat
8.	530015886	Screw	31.	530057612	Cover-Air Filter	54.	530057751	Assy-Flywheel
9.	530071611	Seal-Foam (kit)	32.	530071611	Gasket-Cover (kit)	55.	545053001	Assy-C/shaft & C/case (incl. 56,58,59)
10.	530036626	Base-Air Box	33.	530057034	Foam-Air Filter	56.	530015941	Retainer-C'shaft
11.	530071634	Kit-Carb. (Wt-630)	34.	530037224	Eyelet	57.	530019264	Seal
12.	530071611	Gasket-Carb. (kit)	35.	530015882	Screw	58.	545050501	Assy-C'case (incl.57,64,65)
13.	530016014	Screw	36.	530042073	Cam-Starter	59.	530014864	Assy-Crankshaft
14.	530057618	Adapter-Carb.	37.	530626605	Nut	60.	530071611	O-ring-c'case/shrd (kit)
15.	530071611	Gasket-Cyl./Carb. (kit)	38.	530036665	Drum-Clutch	61.	530057607	Shroud
16.	530012482	Cylinder	39.	530015127	Washer-Flywheel	62.	530016386	Screw
17.	530071611	Gasket-Cyl. (kit)	40.	530014832	Assy-Clutch	63.	530016349	Screw
18.	530071476	Kit-Piston(incl.19,20)	41.	530036922	Cup-Starter	64.	530032125	Bearing-Inner
19.	530012472	Ring-Piston	42.	530042072	Wire-Starter Dog	65.	530055728	Bearing-Outer
20.	530015162	Retainer-Pin	43.	530027162	Dog-Starter	66.	530071611	Kit Gasket (incl.5,9,12,15,17,32,60)
21.	530069945	Kit-Conn. Rod Assy.	44.	530069418	Kit-Starter Pulley(incl.35)			
22.	530016038	Boot-Switch w/nut	45.	530037229	Spring-Starter			
23.	530053921	Plate-Switch Indicator	46.	530053725	Isolator-Crankcase			

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

TYPE 1 & 2


Please refer to the service note at the end of the IPL before ordering parts.

Carburetor Assembly #530069654 WT 308

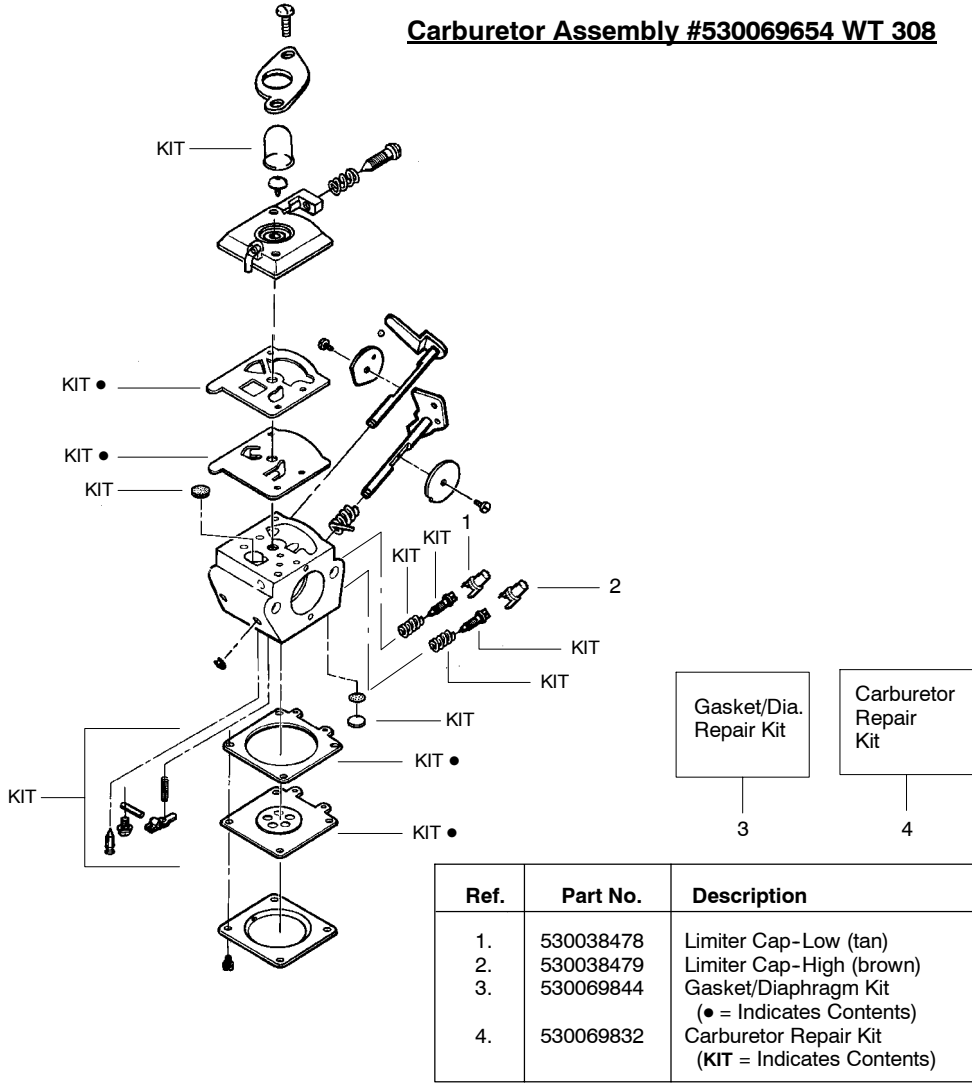

Ref.	Part No.	Description
1.	530038478	Limiter Cap-Low (tan)
2.	530038479	Limiter Cap-High (brown)
3.	530069844	Gasket/Diaphragm Kit (● = Indicates Contents)
4.	530069832	Carburetor Repair Kit (KIT = Indicates Contents)

Kit - Carburetor Assembly No. 530071634 - WT-630

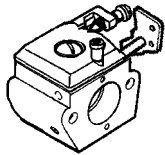

Note: No Repair kits are available for this carburetor, please order the complete assembly part number 530-071634 (WT-630)

✓ = NEW PART NUMBER FOR THIS IPL ★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
 ● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.


PARTS LIST NO. 530087525		WEED EATER® PARTS LIST	EDGER MODEL(s) PE550
DATE 6/06/08	REPLACES 530087525-7/12/06		Note: Illustration may differ from actual model due to design changes

SERVICE REFERENCE

Note: When replacing item# 57 on page 2, please note if the surface indicated by the arrow is flat or has a beveled edge and order accordingly.

(A) Flat Surface – 530-019181 Gasket

(B) Beveled surface – 530-056097 O-ring

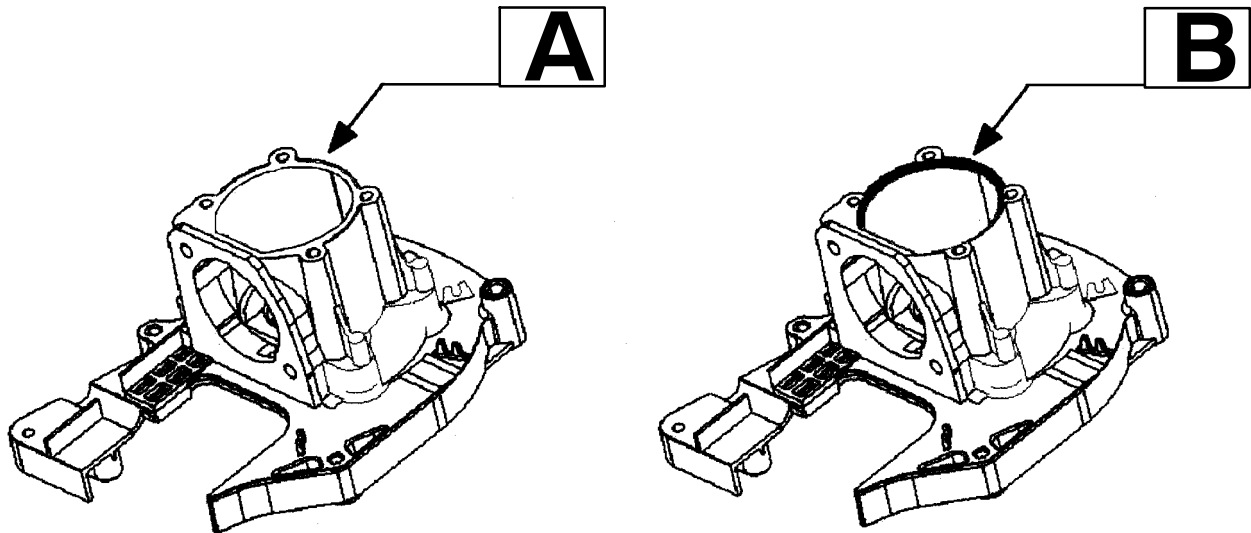

★★★★★ **Service Note:** ★★★★★

Some units were mistakenly built and shipped with the wrong type numbers. If your unit shows a type 1 (1 at the end of the serial number), refer to the following:

ALL UNITS built with a serial number beginning with 01365N and earlier are type 1's.
ALL UNITS built with a serial number beginning with 02001D and greater are type 2's